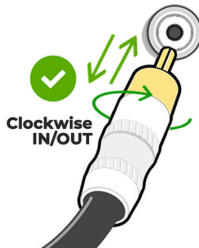
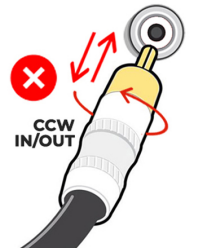
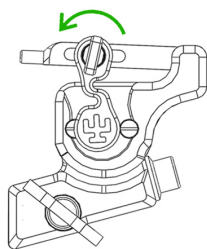
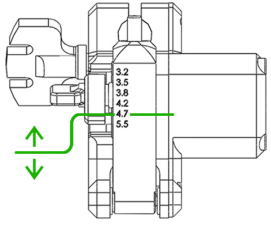
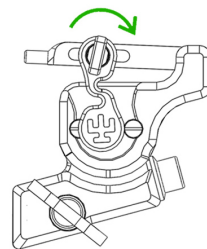


## AVENGER 2 Pro

Thank you very much for trusting our products and purchasing the Avenger 2 Pro. We will be grateful if you tag us on social media using the hashtags: **#vladbladirons** and **#avenger2pro**, as well as mention our Instagram account - **@vladbladirons**!

<p>✓</p> <ul style="list-style-type: none"> <li>• Work on 2-10 volts.</li> <li>• Use RCA cords made by Vlad Blad or other well-reputed brands that care about the quality of their products.</li> <li>• We recommend using power supplies from Vlad Blad or other well-reputed brands. Use the machine with power supplies that provide a continuous output current of 1,5A or higher</li> <li>• Wipe the machine using napkins and cotton buds with alcohol-based disinfection/sterilization solutions (alcohol evaporates quickly and won't expose the components of the machine to corrosion).</li> <li>• Make sure the grip tube that protrudes through the top of the vice, doesn't interfere with the rubber bands. Or it will cause the rubber bands to break</li> </ul>	<p>✗</p> <ul style="list-style-type: none"> <li>• Do not run the machine on a voltage higher than 10 volts. This can cause a malfunction.</li> <li>• Do not use RCA cords of poor quality! You risk damaging the RCA connector on the machine and getting an unstable contact.</li> <li>• Do not use the machine with low-quality power supplies! You risk getting an unstable operation of the machine</li> <li>• Do not wipe the body of the machine with disinfection liquids based on water. Do not use autoclave or hot-air sterilization for the machine! The motor, the covering and the mechanism can get out of order.</li> <li>• Do not run the machine without tightening the Multistroke screw (needle stroke adjustment screw)</li> <li>• Do not try to tighten or work with the Multistroke screw (needle stroke adjustment screw) in between the marks</li> </ul>
<p>! Always tighten the Multistroke screw completely, otherwise it may break. If you hear noise during operation, be sure to tighten this screw.</p>	<p>! Do not unscrew the MultiStroke system screw all the way or a part of the system will fall out. If it falls out, insert and screw it back in.</p>
<p><b>RCA CONNECTION/DISCONNECTION</b></p> <p>• <b>It is recommended to connect and disconnect RCA with clockwise (CW) rotation ONLY!</b></p>  <p>Clockwise IN/OUT</p>	<p><b>RCA WRONG CONNECTION/DISCONNECTION</b></p> <p>• <b>Counterclockwise (CCW) rotation (or both directions) will loosen the connector socket and damage it!</b></p>  <p>CCW IN/OUT</p>

\* **Attention!** For the model BAV3 with binding posts, observe carefully the polarity of the clip cord relative to the polarity of the posts: lower post - "+" / upper post - "-". Incorrect polarity leads to faster wearout of the motor (on clip cords produced by VBI, the polarity "+" is marked in red)

<p>1. Loosen the adjusting screw 1-2 turns until the adjusting screw moves freely</p>	<p>2. Move the screw so it is located opposite the number, indicating the desired needle stroke</p>	<p>3. Tighten the screw down</p>
		
<p>If you hear an abnormal sound, stop the operation and check the tightness of the screw.</p>		

## WARRANTY

- We provide a one-year warranty.
- This machine has been built to show the manufacturer if it has been opened or modified in any way. In this case the warranty will be void.
- If you purchased the machine not at the official VBI store, please provide the receipt or the warranty card in any form to get the warranty service.

Please contact us if you have any questions!

.....  
 .....

 @vladbladirons
  @VladBladShop
  vladbladirons  
 vladbladirons
  shop@vladblad.com